 



USING THE STATION

 
 
1 RECEIVING CALLS


1-1 Answering a call


- 1** When a call is received from an entrance station or security guard station, a call tone will sound and the status indicator flashes. If the station has a camera, video will be displayed on the monitor.

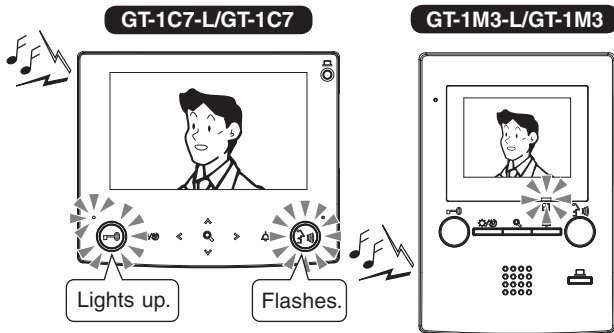


- 2** Press the [] button once, and after the beep, communicate hands-free. Hands-free communication starts when the status indicator switches from flashing to steadily lit.

 - If you press the [] button for at least two seconds while talking hands-free, a beep will be emitted and you can communicate by push-to-talk communication.
- In push-to-talk communication, press the [] button to talk and release it to listen.
- Calling turns off after a set amount of time if there is no answer.
- Listening is possible with hearing aids with T-mode. (GT-1C7-L and GT-1M3-L only)

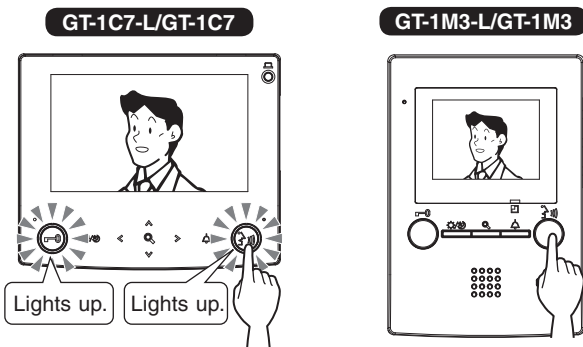

 - 3** When done talking, press the [] button. All the indicators turn off.

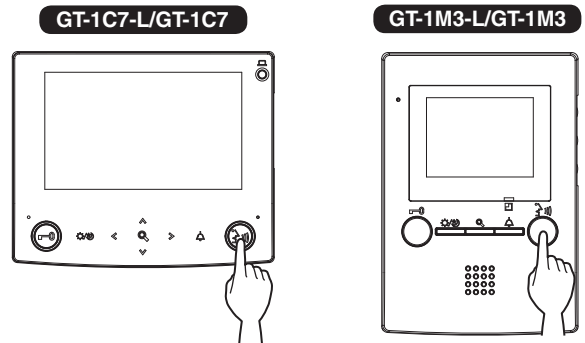


NOTES: • During communication, it is not possible to switch back to hands-free from push-to-talk communication.
• The communication will end automatically after approximately 60 seconds.
• If the call tone volume is turned off, the status indicator will flash with a long interval.

- ⚠** The station emits an electromagnetic field. If a hearing aid with T-mode is brought too close to the station, this may cause ear pain. (GT-1C7-L and GT-1M3-L only)



1-2 Calling from the Doorbell Button

 - 1** When the doorbell button is pressed, a call tone will sound.
- A different call tone sounds. (Communication is not possible.)

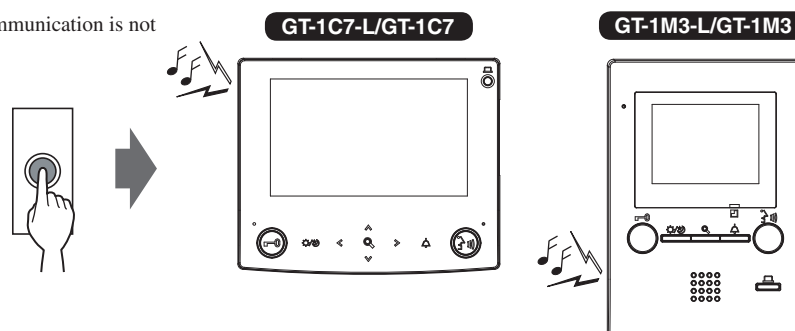

1-3 Door release

  - 1 Press the [] button while in communication with the entrance station.

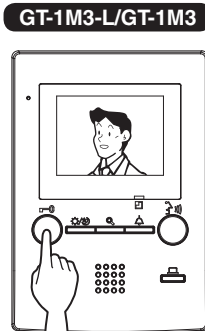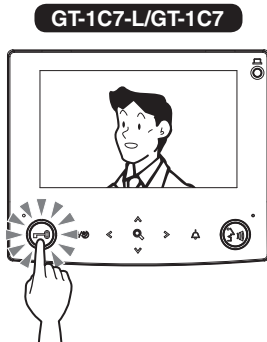

- 2 Door release is activated at the entrance station.

- If calling from a video entrance station, door release can be activated without answering.

 
 


NOTE: If door release output from GT system is connected to an access control system, door release will be activated based on the access control settings.


1-4 Light control

Turning the entrance light on (when light is installed in common area)

- 1 Press the [] button once during entrance station calling, communication, or monitoring.

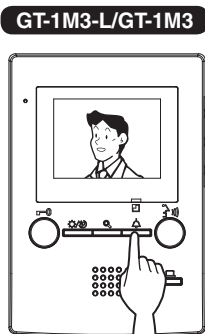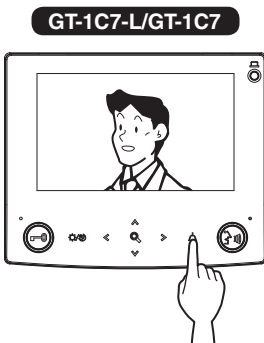

 - 2 The light at the entrance will only turn on for the preset duration of time.


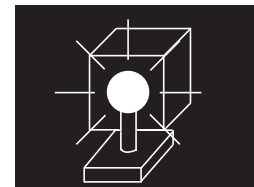


NOTE: This function is not available if a surveillance camera is installed in the common area. (Refer to section 4-5.)



1-5 Doctor call

When the specified residence is called using Doctor call (automatic entry), the electric lock is automatically released without pressing the door release button at the residential/tenant station.

  - 1 In the standby mode, press the [] button while pressing the [] button. Press both buttons once more to reset the Doctor call function.

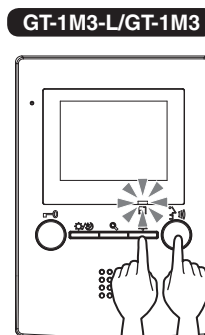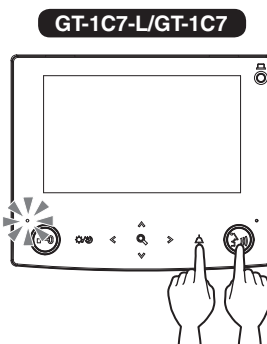


  - 3 The residential/tenant station for which the Doctor call function is set will be called. Press the [] button as necessary to answer.

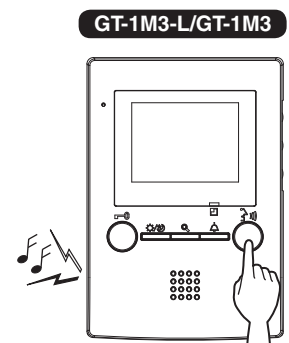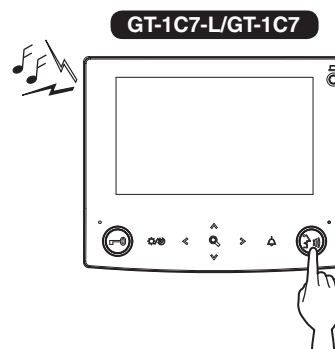


NOTE: When calls are transferred to the security guard station, door release with Doctor call is not possible.

 - 2 Press CALL button at the entrance station to unlock the door without pressing door release button at the residential/tenant station.

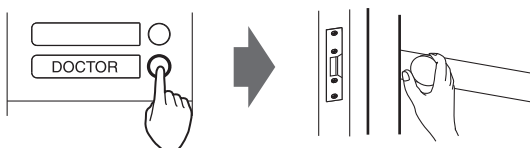

2 CALLING SECURITY GUARD STATIONS

 - 1 In the standby mode, pressing the [△] button will make the status indicator flash and a call confirmation tone will sound.

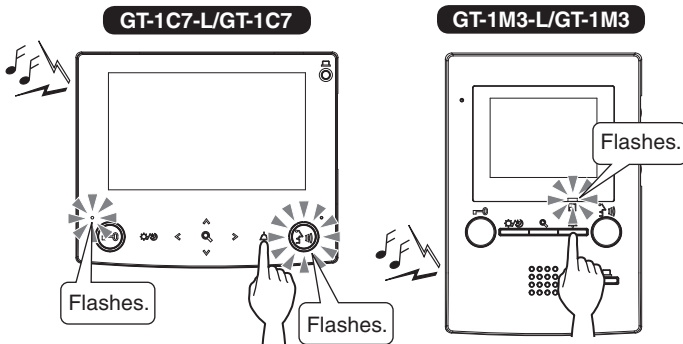


- 2 A tone will sound at the security guard station.

- The in use indicator (orange) at all of the connected entrance stations and security guard stations will light up.
- If there is no answer, a call record will be stored in the security guard station.

3 MONITORING

 - 1 In the standby mode, press the [0] button to display the video images of the entrances in sequence. Audio can be heard at the same time. The status indicator will light up.

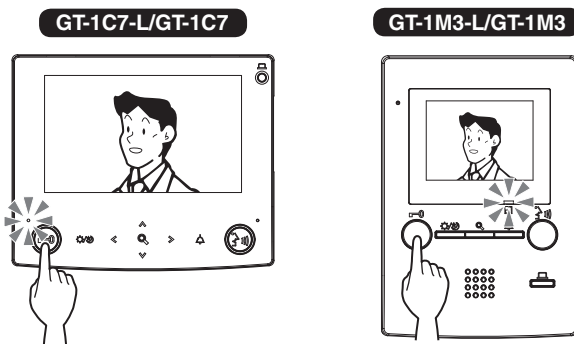

- Listening is possible with hearing aids with T-mode. (GT-1C7-L and GT-1M3-L only)

- NOTES:
- If there is an operation such as a call, monitoring ends and the call operation begins.
 - Monitoring will automatically end if monitoring is performed at another residential/tenant station.
 - Press the [] button during monitoring to communicate with the entrance station being monitored.
 - During monitoring, the wide view is displayed. (If the [] button is pressed, the display changes to the zoom view.)
 - Monitoring will automatically end after 30 seconds.
 - It may take several seconds to display the video after pressing the [0] button. Please wait for the video to display before performing the next button operation.
 - This function may not be operated due to the equipment being used.
 - With this function, you can monitor only entrance stations with camera that were set to allow for being monitored at the time of the installer's setup.